



Assembly instructions

1



(H1) x 22 (M6x40)
countersunk hex
head wood screws

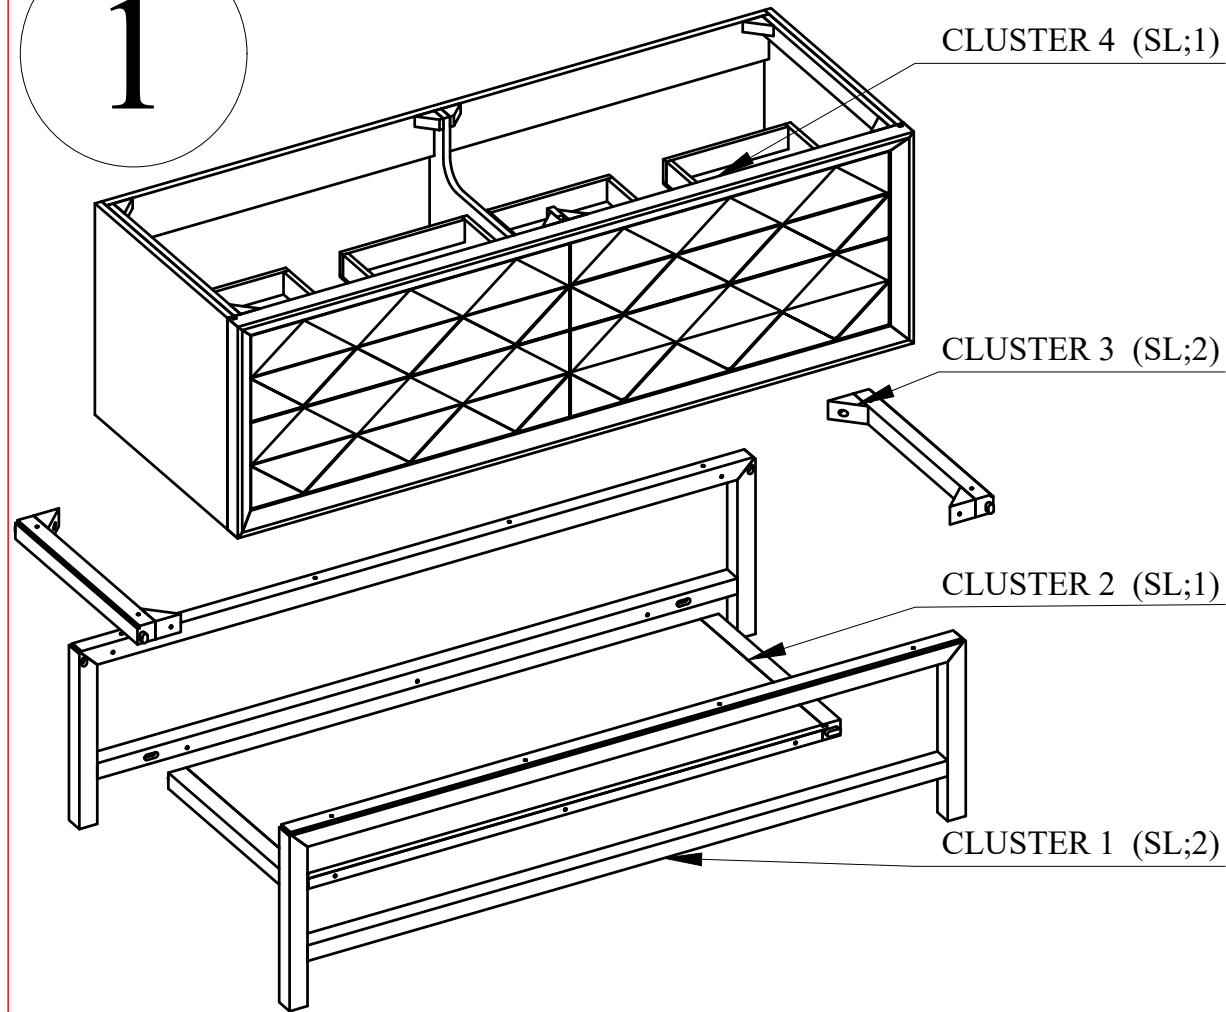


2

H2(1PCS)

H1(6PCS)

CLUSTER 1+2

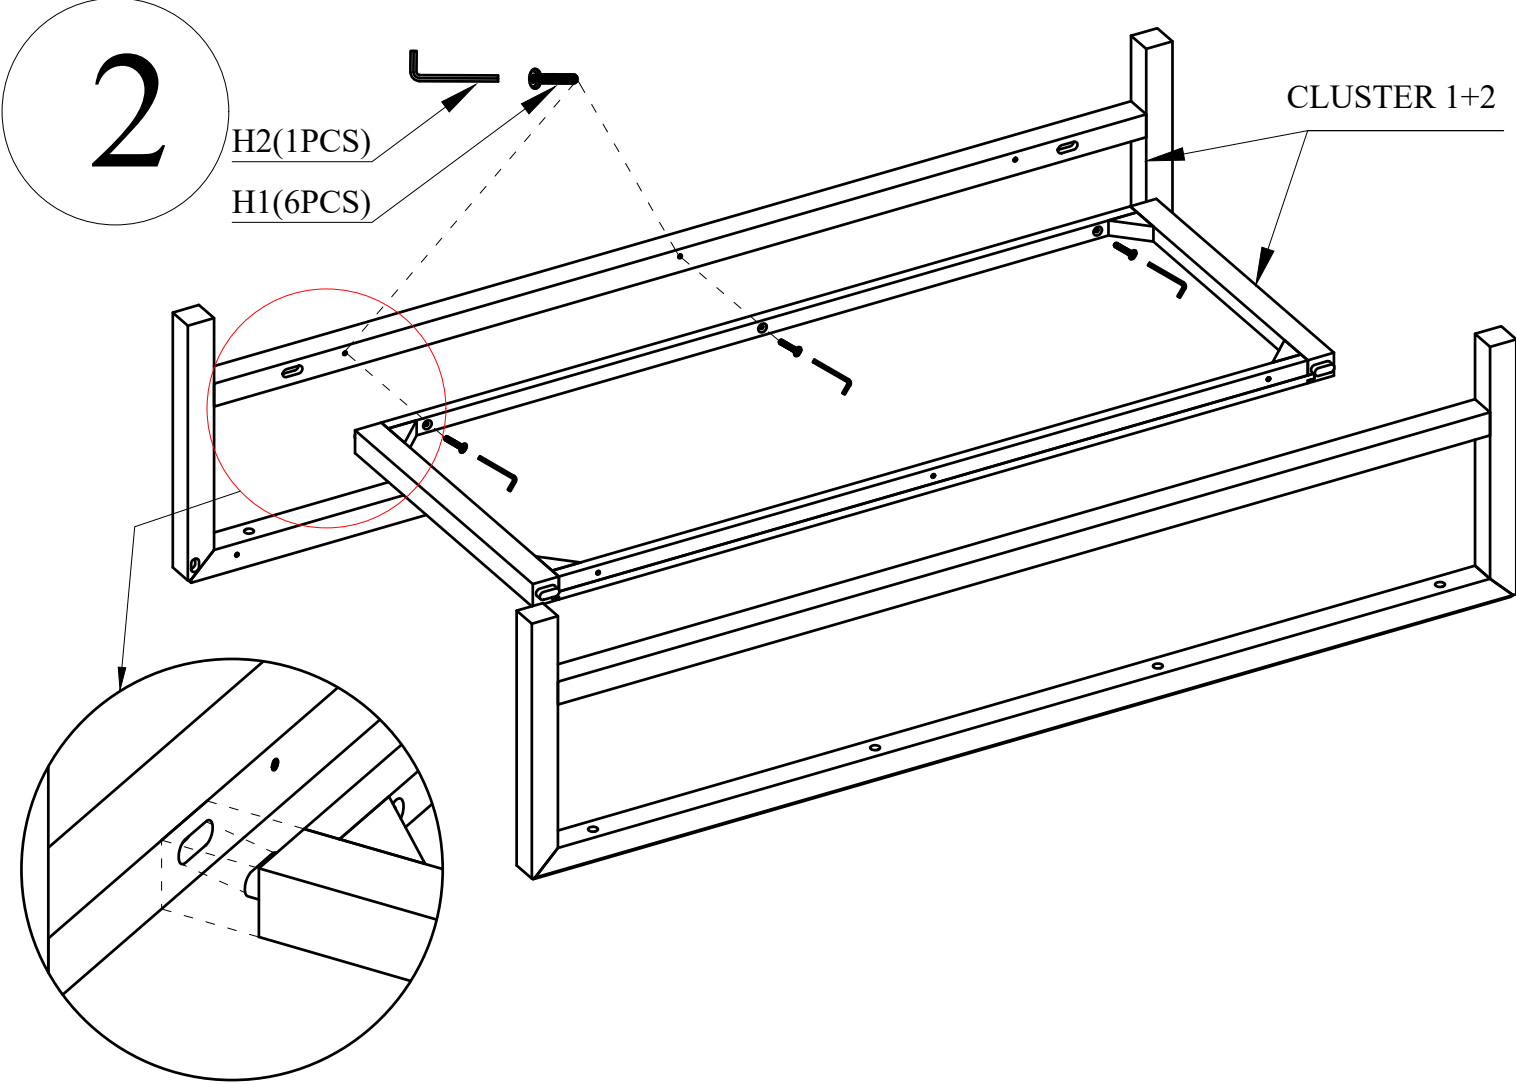


3


H2(1PCS)

H1(6PCS)

CLUSTER (1+2)+3



(H2) x 1
Hexagon buckle

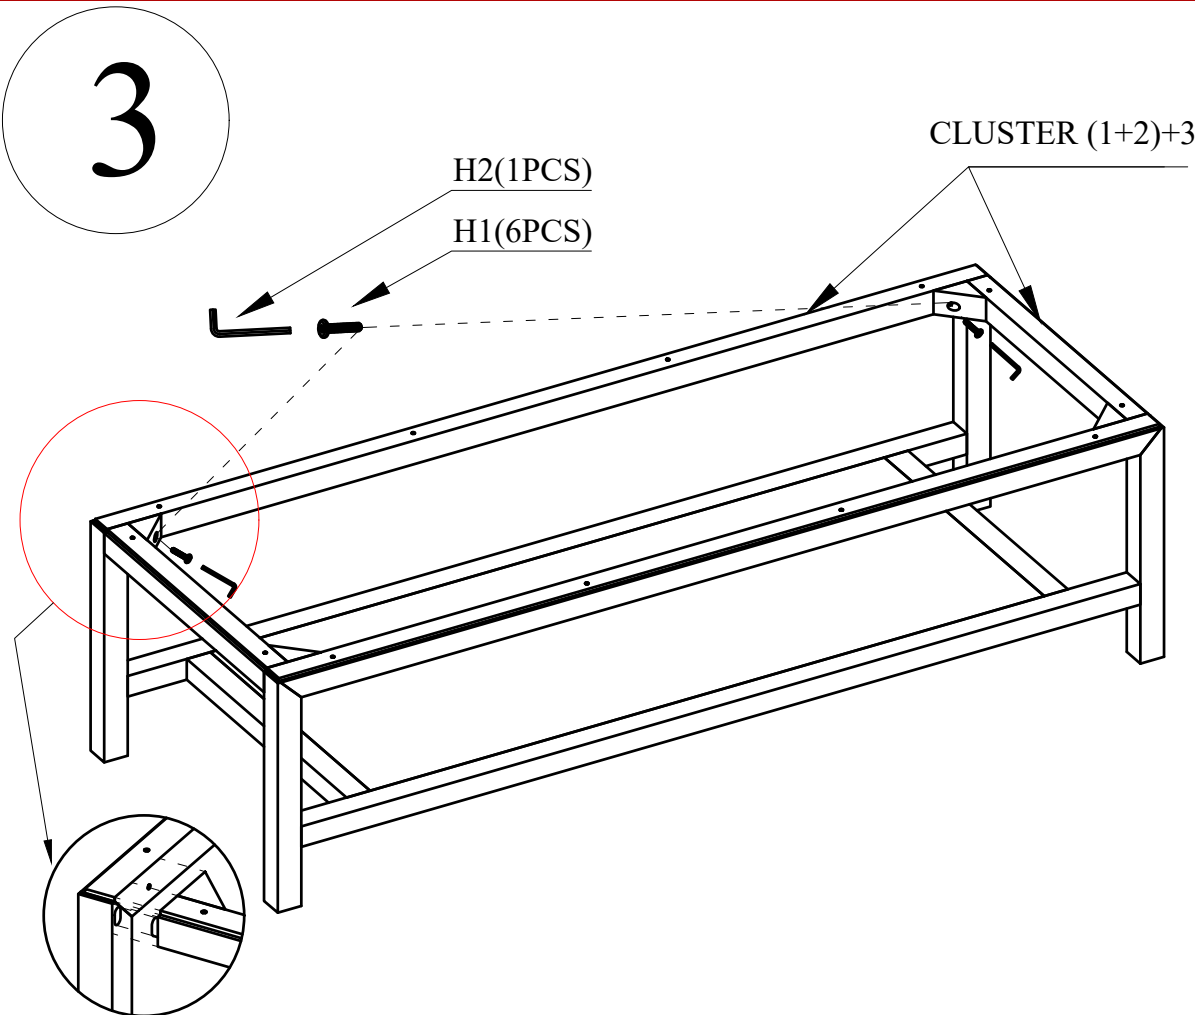

4

H1(12PCS)

H2(1PCS)

CLUSTER (1+2+3)+4

