



# Assembly instructions


## 1




(H1) x 22 (M6x40)  
countersunk hex  
head wood screws

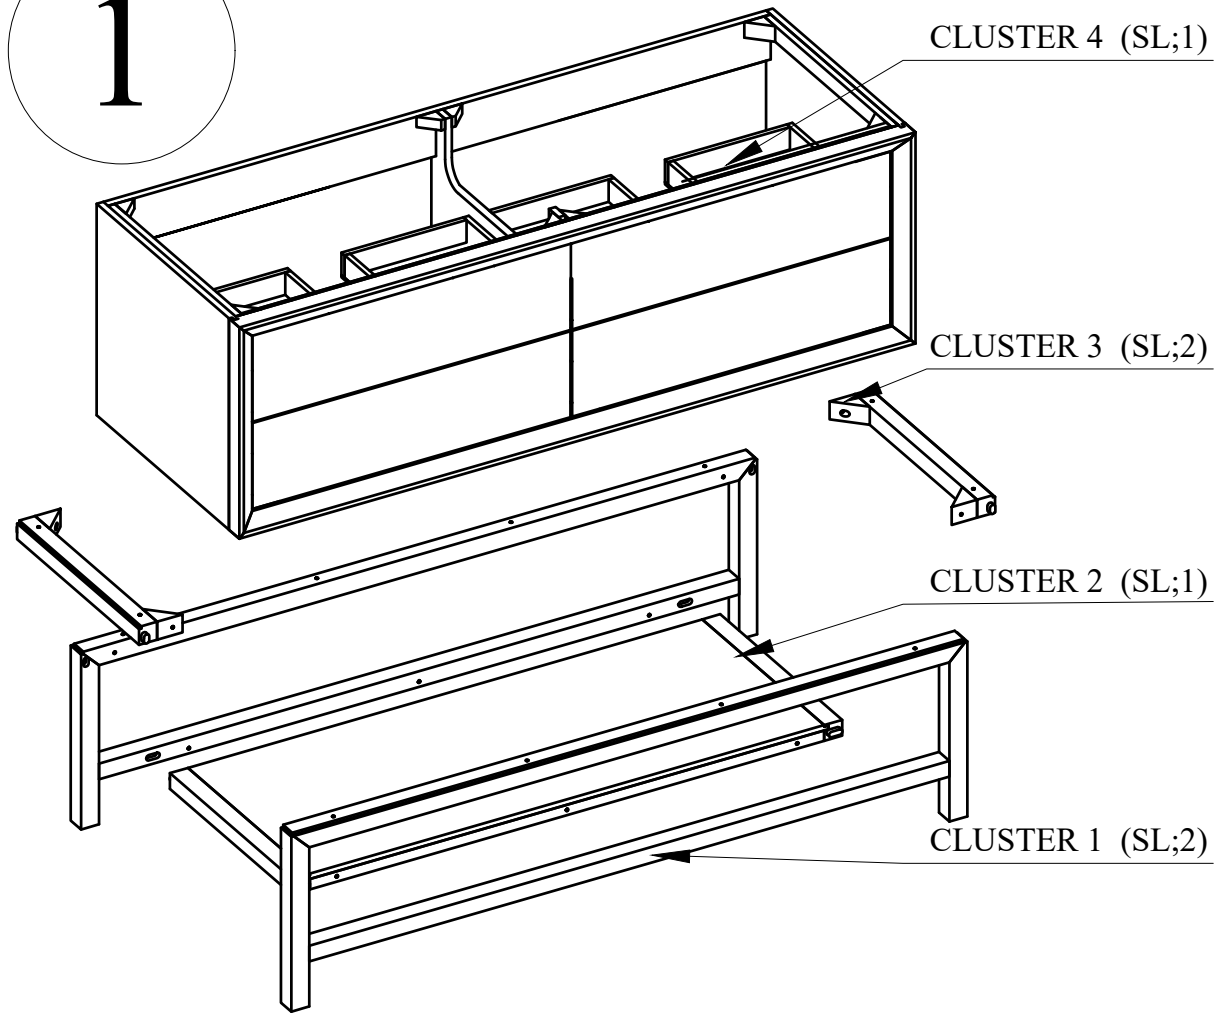


## 2

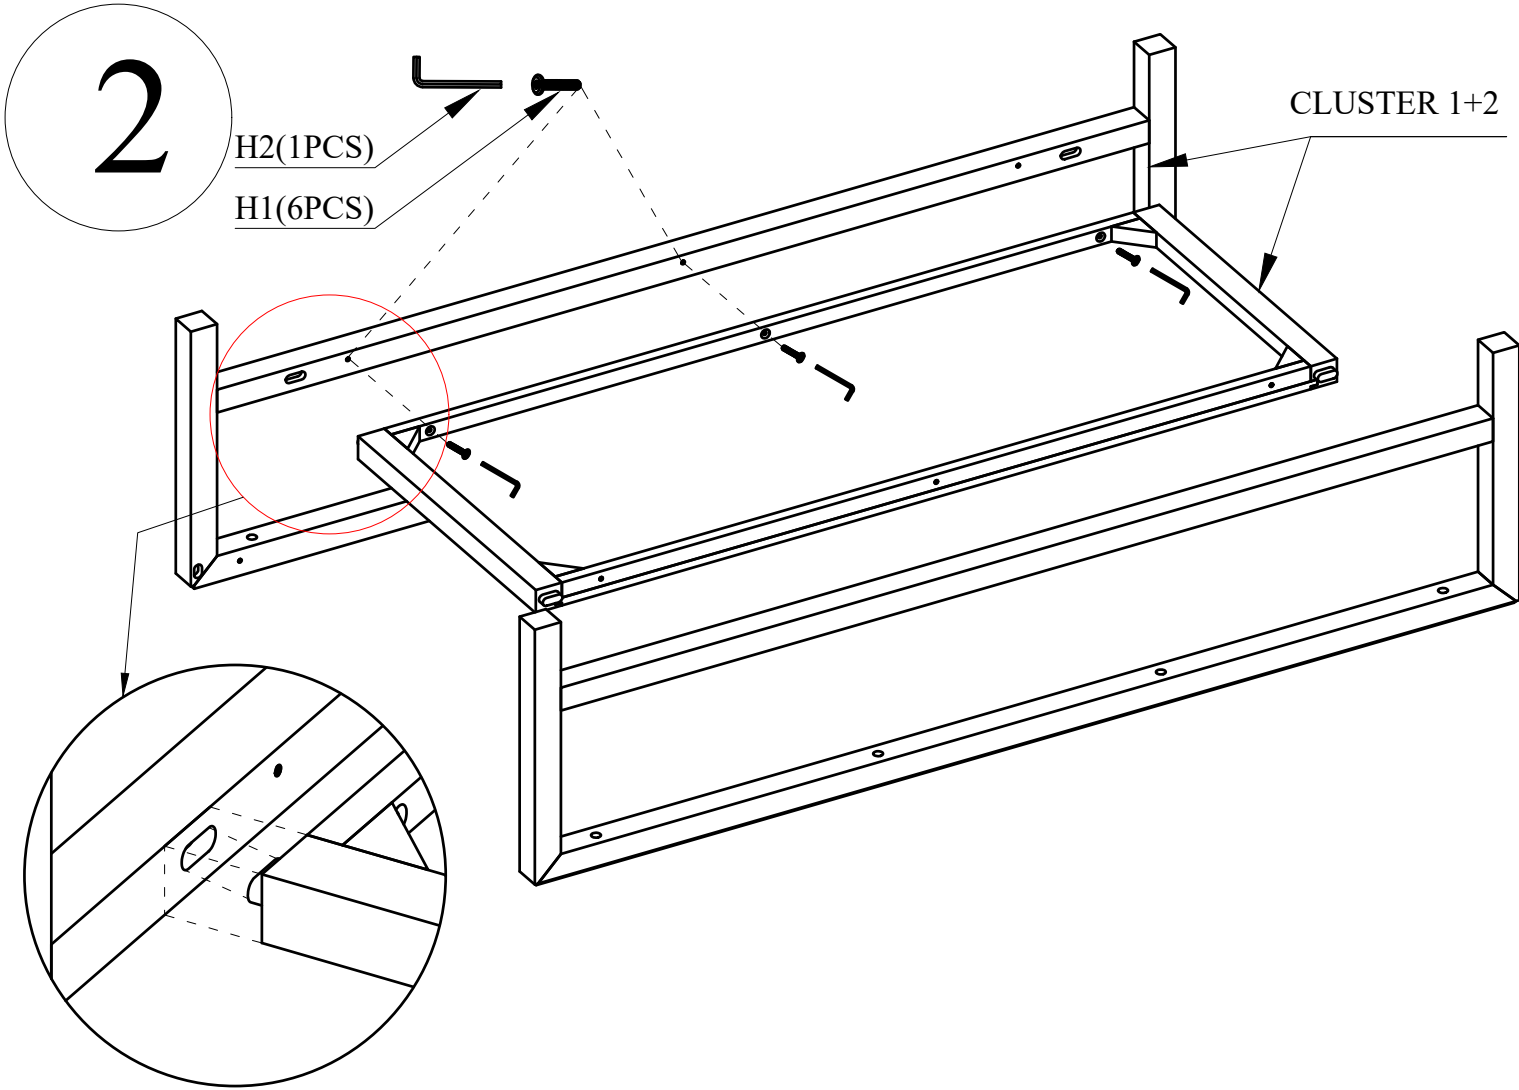

## 3



(H2) x 1  
Hexagon buckle

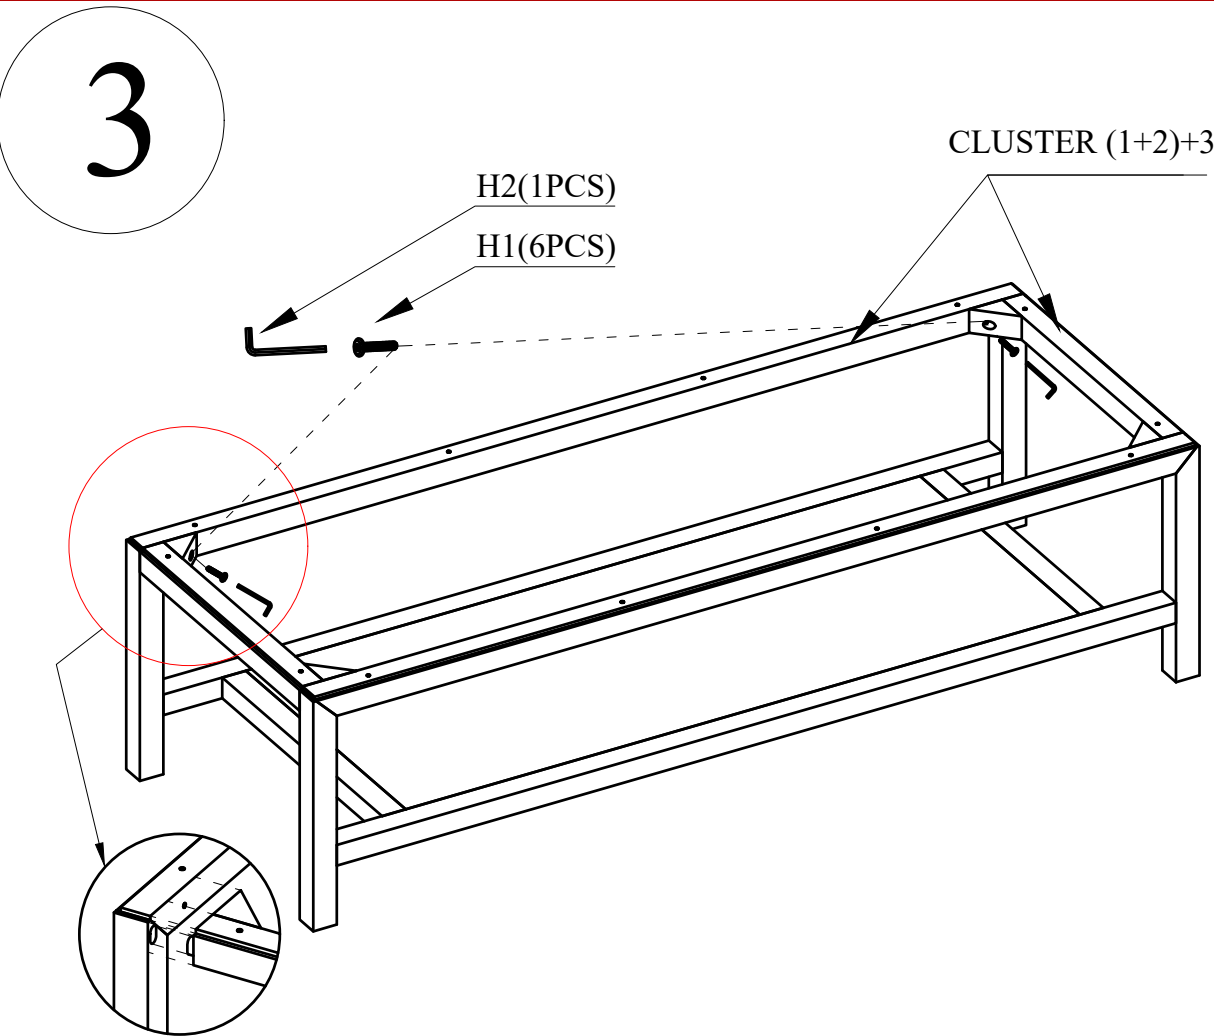

## 4

